

## DESIGN ENVELOPE 4280 END SUCTION

# SINGLE PHASE | 0408-003.0 | SUBMITTAL

**MECHANICAL SEAL DATA** 

Stationary seat: Silicone carbide

**Rotating hardware:** Stainless steel

Seal type: 2A

Secondary seal: EPDM

Spring: Stainless steel

File No: 100.3634

Date: APRIL 18, 2016

Supersedes: NEW

Date: NEW


Job:			Representative:				
Engineer:			Order No:	Date:			
			_ Submitted by:	Date:			
			Approved by:	Date:			
PUMP DESIGN	N DATA		CONTROLS DATA				
No. of pumps:		Tag:	: 	y: Volts: 200-240VAC			
Capacity:	USgpm (L/s)	Head:ft (n	•	Freq: 50/60Hz Phase: 1			
Liquid:		Viscosity:	_ Sensorless Contro	I: Standard			
Temperature:	°F (°C)	Specific gravity:	Minimum system pressure	2			
Suction: 6" (150m	m) Tapped ho	oles	to be maintained	ft (m)*			
Discharge: 4" (10	omm) Flange	d	Protocol (standard				
оsнро Seismic Certif	ication osp-042	22-10					
UL STD 778 & CSA ST	D C22.2 NO.108	certified	Protocol (optional)				
			•	: ☐ Indoor - UL TYPE 12			
MOTOR DESIG	GN DATA		Disconnect switch				
HP: 3	RPM: 1200	Frame size: 213JP	EMI/RFI contro	EMI/RFI control: 1-phase IVS102 units do not meet the EN61800-3 directive			
Enclosure: TEFC	Volts: 208	Freq: 60 Hz					
Phase: 3 Efficiency: NEMA premium 12.12			: Harmonic suppression	: Dual pc-link reactors (equivalent: 5% Ac line reactor) supporting IEEE 519-1992 requirements**			
MAXIMUM PU	JMP OPER	ATING CONDITION	IS Cooling	: Fan-cooled through back channel			
ANSI 125			:	: -10°C to +45°C up to 1000 meters above			
175 psig at 150°F (1	2 hars at 65°c	")	: Ambient temperature	sea level (-14°F to +113°F, 3300 ft)			
140 psig at 250°F (	_		: Analog 1/0	: Two current or voltage inputs,			
		-,	,	one current output			
ANSI 250	h t ./ =0	) e.	: Digital ı/o	: Six programmable inputs (two can be			
300 psig at 150°F (	_			configured as outputs)			
250 psig at 250°F (17 bars at 121°C)			Pulse inputs	puts: Two programmable			
<ul> <li>Tolerance of ±0.125" (±3 mm) should be used</li> <li>For exact installation, data please write factory for certified dimensions</li> </ul>			Relay outputs	: Two programmable			
			Communication por	<b>t:</b> 1-RS485, 1-USB			
certified diffiells	10115		•				

<sup>\*</sup>If minimum maintained system pressure is not known: Default to 40% of design head

\*\*The IVS 102 drive is a low harmonic drive via built-in DC line reactors. This does not
guaranty performance to any system wide harmonic specification or the costs to meet
a system wide specification. If supplied with the system electrical details, Armstrong
will run a computer simulation of the system wide harmonics. If system harmonic
levels are exceeded Armstrong can also recommend additional harmonic mitigation
and the costs for such mitigation.

FLUID TYPE	ALL GLYCOLS > 30% WT CONC		ALL OTHER NON-POTABLE FLUIDS		POTABLE (DRINKING) WATER	
Temperature	up to 200°F / 93°C	over 200°F / 93°C	up to 200°F / 93°C	over 200°F / 93°C	up to 200°F / 93°C	over 200°F / 93°C
Rotating face	Silicone carbide		Resin bonded carbon	Antimony loaded carbon	Resin bonded carbon	
Seat elastomer	EPDM (L-cup)	EPDM (O-ring)	EPDM (L-cup)	EPDM (O-ring)	EPDM (L-cup)	EPDM (0-ring)
Material code	SCsc L EPSS 2A	SCsc o epss 2A	C-SC L EPSS 2A	ACsc o epss 2A	C-SC L EPSS 2A	C-SC O EPSS 2A

### **EXTENDED SPEED**

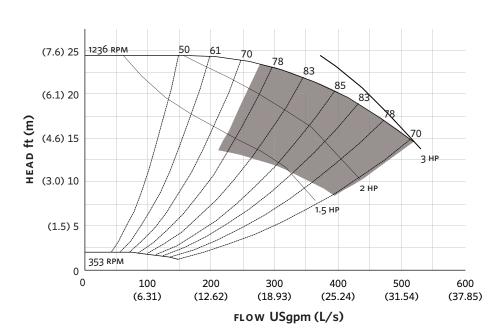

Performance curves are for reference only.

Confirm current performance data with Armstrong ACE Online selection software.

### **DIMENSION DATA**

INDOOR (UL TYPE 12/ODP)

Frame size: 213JP

Size:  $6 \times 4 \times 8$ 

**HP:** 3

**RPM:** 1200

**A:** 10.27 (261)

**B:** 7.48 (190)

**C MAX:** 27.65 (702)

**D1:** 7.63 (194)

**D2:** 5.25 (133)

**2E:** 8.50 (216)

**F:** 5.50 (140)

**H:** 0.47 (12)

**HD:** 7.68 (195)

**HI:** 28.37 (721)

**HV:** 16.98 (431)

**N:** 11.13 (283)

**NaN1:** 6.00 (152)

x: 11.00 (279)

**y:** 4.00 (102)

Casing foot hole: 0.63 (16)

Weight: 388 (176.0)

Dimensions - inch (mm) Weight - lbs (kg)

#### INDOOR



BUFFALO +1 716 693 8813

TORONTO

BIRMINGHAM

+44 (0) 8444 145 145

MANCHESTER

+44 (0) 8444 145 145


BANGALORE


+91 (0) 80 4906 3555

SHANGHAI

+86 21 3756 6696

SÃO PAULO +55 11 4781 5500

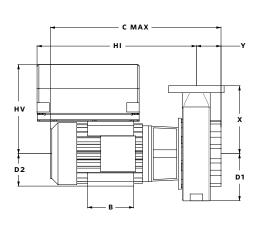

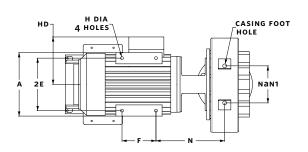

ARMSTRONG FLUID TECHNOLOGY ESTABLISHED 1934